



## **PARTS LIST**

**☆** :Consuming Part

Item No.	Part No.	Description	Qty.	Item No.	Part No.	Description	Qty.
1	840S01	•	4	17	840S17	Pin	4
1		Housing					l l
2	840S02	Spring Pin	1	18	840S18	Cylinder	1
3	840S03	Air Inlet	1	19	840S19	Front End Plate	1
4	840S04	Trigger	1	20	840S20	Internal Gear	1
5	840S05	Valve Stem	1	21	840S21	Pin	3
6	840S06	Reverse Bushing	1	22	840S22	Planetary Gear	3
7	840S07	O-Ring	1	23	840S23	Work Spindle	1
8	840S08	Spring	1	24	840S24	Ball Bearing	2
9	840S09	O-Ring	2	25	840S25	Chuck Washer	1
10	840S10	Reverse Valve	1	26	840S26	Chuck Screw	1
11	840S11	Motor Gasket	1	27	840S27	O-Ring	1
12	840S12	Trigger Screw	1	28	840S28	Exhaust Deflector	1
13	840S13	Ball Bearing	2	29	840S29	Screw	2
14	840S14	End Plate	2	30	840S30	Clamp Nut	1
15	840S15	Rotor	1	31	840S31	Drill Chuck (3/8")	1
16	840S16	Rotor Blades	5	32	840S32	Chuck Key	1

2008/6/26